

Vending Machine Manual

Normal Use

Step 1.

Turn Power Switch On
-Located on rear of product

Step 2.

Select Product
-1 of the 12 arcade buttons on front panel



Step 3.

Enter Money
-Press change and bill buttons on front right side of product



Step 5.

Press "Help" if needed
-Pressing Help will display varying combinations of coins that need to make up the remaining balance.



Step 6.

Press "Done" if you think you are correct.




Press "Reset" to start over.

-Will reset balance as well as product selection



Programming Mode

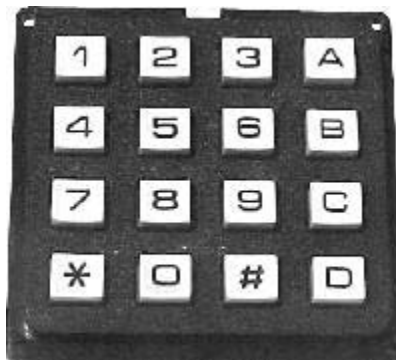

1. Turn on rear programming panel. (Switch on black panel)
2. Type in Row (a-d) followed by the column (1-3)
3. Type in the price (4 digits)
4. Press # for complete
5. Press * to clear
6. Price will update.