

Vending Machine Programming Guide

1. Open rear-programming panel
2. Select product to change price of
 - LED light on rear panel will indicate product
3. Enter new price
4. Press * for a decimal point
5. Press # when done.
6. Price will update.