

Vending Machine Quick Start Guide

Step 1.



Turn Power Switch On
(Rear of Device)

Step 2. Select Product



Step 3. Enter Money



Step 5.

Press "Help" if needed



Step 6.

Press "Done" if you think you are correct.



Press "Reset" to start over.



Adjust the volume with slider

